

CF128

Kawasaki KLV 1000 2004-2006

Kit for Left Side			
ID	Description	Cat.No	Pcs
1	Frame	CF128-L	1
2	Bolt M10xx100x1,25mm	892	1
3	Bolt M10x50mm	996	1
4	Dural. sleeve	1315	1
5	Flat washer M10	804	2
6	Bolt M8x25mm	831	2
7	Lock nut M8	809	2
8	Dural. sleeve	109	1
9	Bolt M8x50mm	837	2
10	Dural. sleeve	252	2
11	Plastic cap M8	X5	2
12	Plastic cap M10	X4	2
13	Ocelová vzpěra pod světlo	X129	1

Kit for Right Side			
ID	Description	Cat.No	Pcs
1	Frame	CF128-P	1
2	Bolt M10x100x1,25mm	892	1
3	Lock nut M10	810	1
4	Dural. sleeve	1315	1
5	Flat washer M10	804	2
6	Flat washer M8	802	8
7	Bolt M8x25mm	833	2
8	Dural. sleeve	109	1
9	Bolt M8x50mm	837	2
10	Dural. sleeve	252	2
11	Plastic cap M8	X5	2
12	Plastic cap M10	X4	2

We recommend using medium strenght thread glue during assembly.


Instructions:

- 1.) Mount the crash frame from the left side, see the picture
- 2.) Mount the crash frame from the right side, see the picture
- 3.) Tighten the bolt only after mounting both sides.


2x bolt M10 ID.2 + 2x
dural. sleeve ID.8 + 2x
washer M10 + 2x plastic
cap 45



Nut M10 ID.3 +
sleeve ID.4 +
washer M10 ID.5

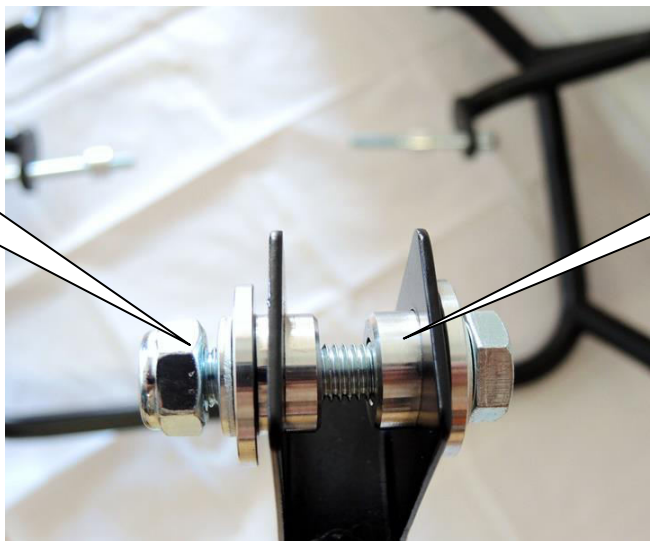

Bolt M10 ID.3 +
sleeve ID.4 +
washer M10 ID.5

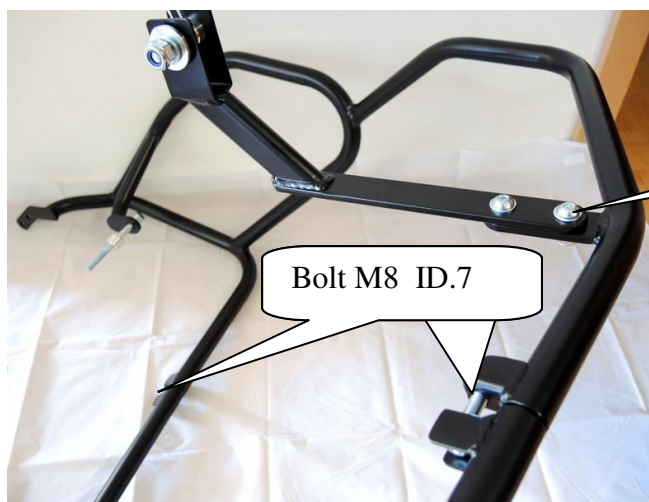

Bolt M8 ID.7

2 x bolt M8 ID.6 + 4x washer M8
ID.6 + 2x nut M8 ID.7

2x bolt M10 ID.2 + 2x sleeve ID.8 + 2x
washer M10 + 2x palstic cap 45



4x olt M8 ID.9 + 4x sleeve ID.10 + 4x
washer M8 + 4x cap X5